

Steele County Emergency Management

Motorola XTS1500 Portable Radios

WARN 01 thru WARN 12

1. Turn-On the Radio

- Turn the VOLUME control clockwise.
- The bi-color LED will flash red & green while beforforming a self test. Wait 10 seconds to allow the radio to register with the system before talking.

2. Select a Zone

- Press Side Button 1 to change zones.

3. Select a Talkgroup

- Turn the TALKGROUP SELECTOR knob on the top of the radio to the desired position.

4. Transmit a Message

- Listen to be sure no one is using the Talkgroup.
- Press and hold the PUSH-TO-TALK button on the side of the radio.
- Wait for the TALK PERMIT tones (beep-beep-beep) before speaking.
- Release the PUSH-TO-TALK button to listen.

If You Hear a “Chirping” Sound

- The battery is running low.
- As the battery grows weaker, the CHIRPING SOUND will appear more frequently until the battery finally runs out.
- It takes about 3 hours to recharge a battery.

If you hear a “BONK”

- The Talkgroup or System is busy.
- Release the PUSH-TO-TALK switch.
- When the Talkgroup or System is available, you will hear the TALK PERMIT tones.
- Press and hold the PUSH-TO-TALK button to transmit.

Steele County Emergency Management Motorola XTS-1500 Zone Map WARN01 thru WARN12							
	ZONE	SEM	FIR	SE	8-C	MN	BLANK
Talk Group	1	SCEM OP1	SCEM OP1	SE-CALL	SOA-1	S-TAC-1	
	2	SCEM OP2	SCEM OP2	SE-2	SOA-2	S-TAC-2	
	3	SCEM CMD	SCEM CMD	SE-3	SOA-3	S-TAC-3	
	4	STEELE 1	STEELE 1	SE-4	SOA-4	S-TAC-4	
	5	STEELE 2	STEELE 2	SE-5	F-SOA-1	S-TAC-5	
	6	STEELE 3	STEELE 3	SE-6	F-SOA-2	S-TAC-6	
	7	SEM TAC	OWFD OP1	SE-7	8CALL90D	S-TAC-7	
	8	PS COM	OWFD OP2	SE-8	8TAC91-D	S-TAC-8	
	9	COMMON	OWFD OP3	SE-9	8TAC92-D	S-TAC-9	
	10	SL ROAM	MEFD OP1	SE-10	8TAC93-D	S-TAC-10	
	11	DYN RGP	ELFD OP1	SE-11	8TAC94-D	S-TAC-11	
	12	SOA-1	BFPD OP1	SE-12	8CALL90R	S-TAC-12	
	13	SOA-2	OPU OPS1	SE-13	8TAC91-R	SCEM CMD	
	14	SOA-3	F-SOA-1	SCEM OP1	8TAC92-R	SCEM OP1	
	15	SOA-4	F-SOA-2	SCEM OP2	8TAC93-R	SCEM OP2	
	16	SL-911	SCFDMAIN	SE-CALL	8TAC94-R	SL-911	

Steele County Emergency Management Motorola XTS1500 Portable Radios WARN 01 thru WARN 12

A / B / C Switch
 • Not Used

Talkgroup Selector Knob
 • Turn to select talk group

On / Off / Volume

Bi-Color LED

- FLASHING GREEN THEN FLASHING RED indicates the radio is connecting to the radio system
- STEADY GREEN indicates the radio is transmitting

Orange Button
 • Emergency Use Only

Purple Button
 • Illuminate Display

Push-to-Talk

- Wait for the talk permit tones (*beep-beep-beep*).
- Retry if busy (*bonk*).

Side Button 1
 • Change Zones

Side Button 2
 • Not Used

Accessory Connector

- On right side
- Use protective cover when not used

ZONE

TALKGROUP

Radio ID

